

# KPU




*Your Community, Your Utility*

## **entone** Remote Key Functions



1. **Setup** – *Unused Key*
2. **Input** – Changes the Audio – Video input of the selected device (*not able to be used on all TVs*)
3. **Power** – Switches the Power on/off for the selected device (Set Top Box, TV, Aux) **Only controls the TV if remote has been programmed to control the TV or AUX device.**
4. **STB** – Puts the remote control into Set Top Box mode instead of TV control mode.
5. **TV** – Allows control of the TV (not able to use on all TVs). **Must be programmed to selected model of TV**
6. **LANG** – Toggles closed captioning on or off on decoder 1
7. **GUIDE** – Shows TV program guide
8. **VOL +/-** – Raises or lowers volume of TV (not able to use on all TVs). **Must be programmed to the selected brand of TV.**
9. **LAST** – Changes channel to the most recently viewed one.
10. **PAUSE** – Pause Button for VOD movies or for current or recorded TV programs if you have a PVR/ DVR
11. **CHAPTER** – Goes to the previous or the next chapter in VOD movies.
12. **FAST Reverse and FAST Forward** – Starts Fast forward or Fast Reverse for VOD Movies or for Current show or Recorded show if you have a PVR/DVR
13. **RED** – Circle button – Displays the TV Show guide and allows you to change the display of the shows in the guide from a Horizontal (Channels x Time) to a Vertical (Time x Channels) Format. *When in other parts of the Menu, the red circle can represent other functions.*
14. **GREEN** – Circle button – *Not used at this time.*
15. **NUMBER KEYS** – Allows channel numbers to be directly entered.
16. **ENTER** – Not used at this time.
18. **Movies** – Displays the Video on Demand (VOD) Movie Menu – allows you to watch New and Library (older) and Free movies anytime you want. **KPU PIN number is required to rent.** Movies can be paused, rewind, fast – forwarded and watched as many times as you would like in 24 hours.
19. **RECORD IT** – Displays the DVR/PVR recorder menu (Finished, Scheduled, Series, New)
20. **PROMOS** – Not used at this time.
21. **AUX** – Controls auxiliary devices – usually not used.
22. **INFO** – Displays on-screen info about the current TV program or program on the TV guide.
23. **MENU** – Displays Menu for either a)TV Menu b)PVR/DVR
24. **EXIT** – exits the current Menu item or returns to the last TV program you were watching on TV (*takes you out of the VOD movie you were watching or PVR/DVR recorded program you were watching*)
25. **CHANNEL UP/DOWN** – changes the Channel up or down
26. **RECORD** – Use with PVR/DVR to Record a Live/Current program by going to the Guide, choosing a program and pushing this button. A red dot appears to let you know that it is recording. If you get an X then it is NOT recording; you may have to reboot (unplug the power and replugin) the Entone box.
27. **STOP** – Stop Button for VOD (video on demand) or when watching a live program on a PVR/DVR
28. **ARROW KEYS** – use to navigate right, left, up, down in the On – Screen TV guide or when in the PVR/DVR menus.
29. **OK** – push to execute the selected Menu option
30. **PLAY** – Use to start or restart a VOD (Video on Demand) show or for playing live TV that you have paused or stopped on a PVR/DVR.
31. **BLUE BUTTON – FAVORITES** – Takes you to the selected Favorite channels guide

32. **YELLOW BUTTON – INFO** – gives you information on the current program or info on a channel that you have selected/highlighted in the On – Screen Guide. Press DTV to exit info.
33. **MUTE** – if programmed to your TV, it will stop the audio until you push it again.
34. **MEDIA** – *Unused at this time*
35. **MUSIC** – Takes you to the first of the Music Channels (731) you can Channel UP through the 45 different selections

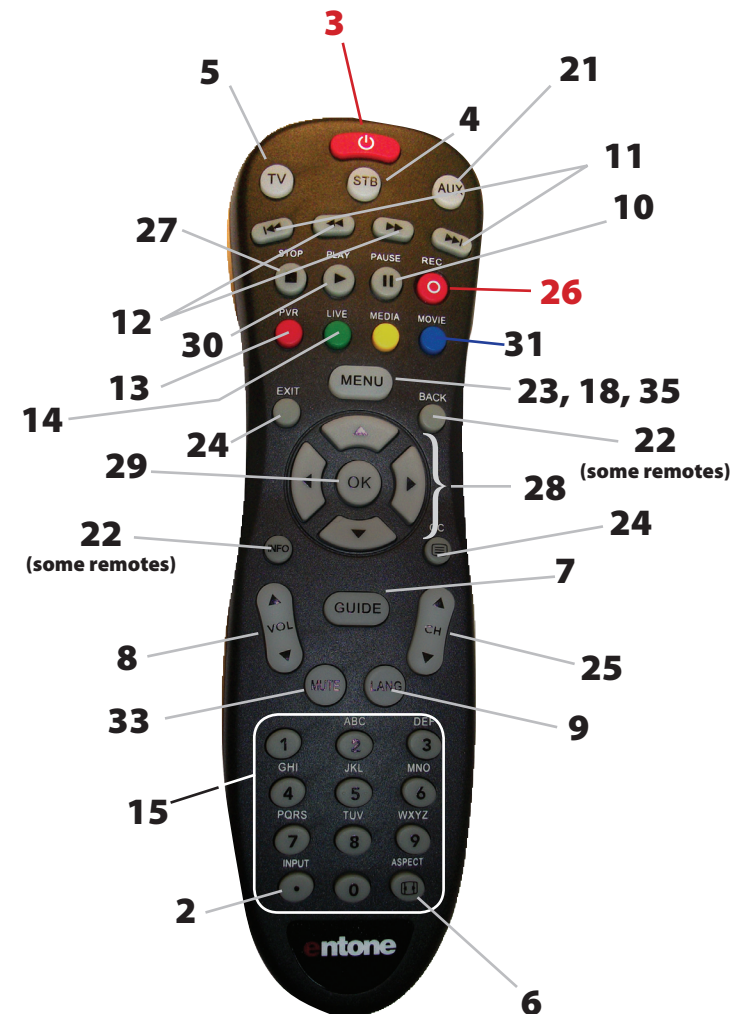

# KPU




*Your Community, Your Utility*

## **entone** Remote Key Functions



1. **Setup** – *Unused Key*
2. **Input** – Changes the Audio – Video input of the selected device (*not able to be used on all TVs*)
3. **Power** – Switches the Power on/off for the selected device (Set Top Box, TV, Aux) **Only controls the TV if remote has been programmed to control the TV or AUX device.**
4. **STB** – Puts the remote control into Set Top Box mode instead of TV control mode.
5. **TV** – Allows control of the TV (not able to use on all TVs). **Must be programmed to selected model of TV**
6. **LANG** – Toggles closed captioning on or off on decoder 1
7. **GUIDE** – Shows TV program guide
8. **VOL +/-** – Raises or lowers volume of TV (not able to use on all TVs). **Must be programmed to the selected brand of TV.**
9. **LAST** – Changes channel to the most recently viewed one.
10. **PAUSE** – Pause Button for VOD movies or for current or recorded TV programs if you have a PVR/DVR
11. **CHAPTER** – Goes to the previous or the next chapter in VOD movies.
- ★ 12. **FAST Reverse and FAST Forward** – Starts Fast forward or Fast Reverse for VOD Movies or for Current show or Recorded show if you have a PVR/DVR
13. **RED** – Circle button – Displays the TV Show guide and allows you to change the display of the shows in the guide from a Horizontal (Channels x Time) to a Vertical (Time x Channels) Format. *When in other parts of the Menu, the red circle can represent other functions.*
14. **GREEN** – Circle button – *Not used at this time.*
15. **NUMBER KEYS** – Allows channel numbers to be directly entered.
16. **ENTER** – *Not used at this time.*
- ★ 17. **DTV** – Returns to the last TV program you were watching on TV (*takes you out of the VOD movie you were watching or PVR/DVR recorded program you were watching*)
18. **Movies** – Displays the Video on Demand (VOD) Movie Menu – allows you to watch New and Library (older) and Free movies anytime you want. **KPU PIN number is required to rent.** Movies can be paused, rewind, fast – forwarded and watched as many times as you would like in 24 hours.
19. **RECORD IT** – Displays the DVR/PVR recorder menu (Finished, Scheduled, Series, New)
20. **PROMOS** – *Not used at this time.*
21. **AUX** – Controls auxiliary devices – usually not used.
22. **INFO** – Displays on-screen info about the current TV program or program on the TV guide.
23. **MENU** – Displays Menu for either a) TV Menu b) **PVR/DVR**
24. **EXIT** – exits the current Menu item
25. **CHANNEL UP/DOWN** – changes the Channel up or down
- ★ 26. **RECORD** – Use with PVR/DVR to Record a Live/Current program by going to the Guide, choosing a program and pushing this button. A red dot appears to let you know that it is recording. If you get an X then it is NOT recording; you may have to reboot (unplug the power and replug) the Entone box.
- ★ 27. **STOP** – Stop Button for VOD (video on demand) or when watching a live program on a PVR/DVR
28. **ARROW KEYS** – use to navigate right, left, up, down in the On – Screen TV guide or when in the PVR/DVR menus.

29. **OK** – push to execute the selected Menu option
- ★ 30. **PLAY** – Use to start or restart a VOD (Video on Demand) show or for playing live TV that you have paused or stopped on a PVR/DVR.
31. **BLUE BUTTON – FAVORITES** – Takes you to the selected Favorite channels guide
32. **YELLOW BUTTON – INFO** – gives you information on the current program or info on a channel that you have selected/highlighted in the On – Screen Guide. *Press DTV to exit Info.*
33. **MUTE** – if programmed to your TV, it will stop the audio until you push it again.
34. **MEDIA** – *Unused at this time*
35. **MUSIC** – Takes you to the first of the Music Channels (731) you can Channel UP through the 45 different selections
36. **HELP** – *Not used at this time*
37. **PHONE** – *Not used at this time*

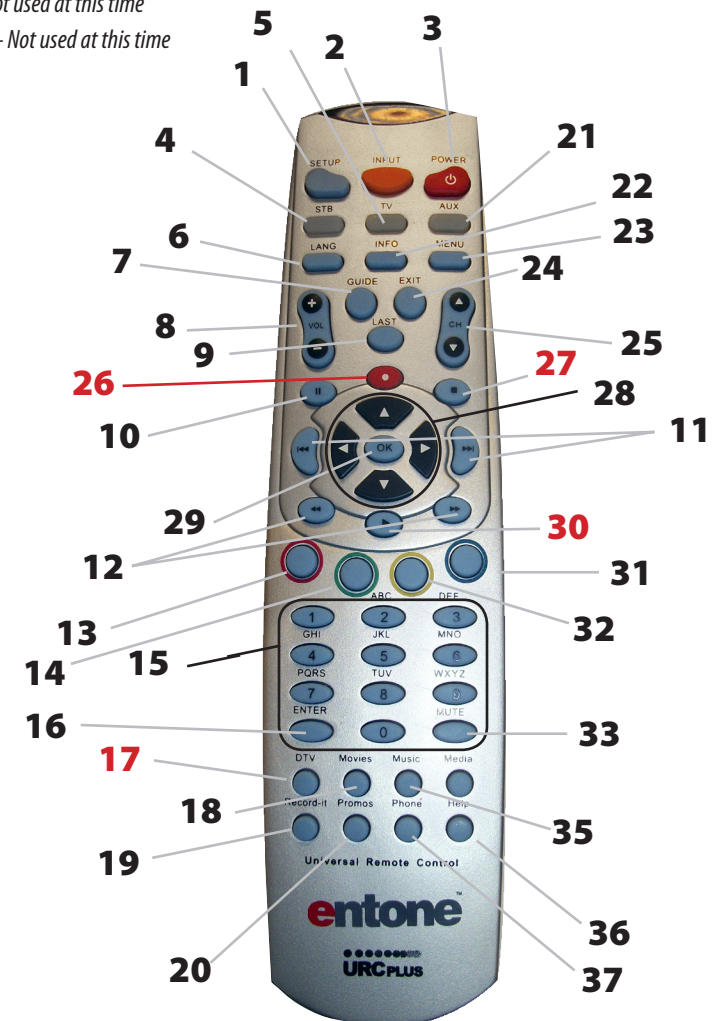

★ These keys are for use with PVR/DVR recording and viewing, and some Video-on-Demand (VOD) functions.